



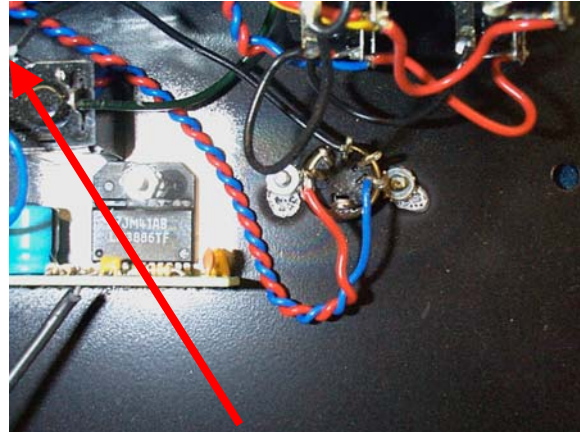


www.motion-sound.com

Kit #KP-SLA kP-200S slave amplifier connector instructions.

Outside Rear View of Slave Connector Inside View of Slave Connector

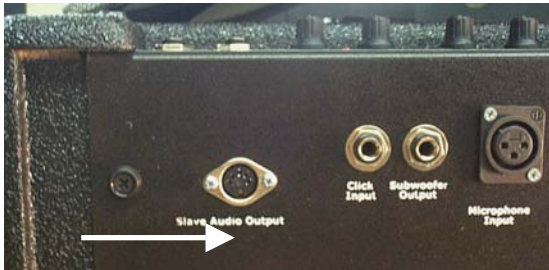

1. Remove both handles and cut cable ties on speaker wires. (replace ties on re-assembly)
2. Remove the speaker grill and 10" speakers. (Note wire connection polarity and color.)
3. Remove 16 screws from the rear and 5 screws from the top of the cabinet.
4. Remove the chassis from the cabinet. (carefully feed speaker wires through holes)
5. Mark a hole approximately 2 1/4" from the left of the chassis edge and in horizontal line with the screw hole. (white arrow in upper left image)
6. Drill or punch a .625" (5/8") hole in the chassis.
7. Place the DIN 5 pin connector in the chassis and mark the mounting screw holes for drilling.
8. Drill the two 3/16" holes and mount the connector with the 4-40 hardware supplied.
9. Be sure no metal filings fall into the electronics.

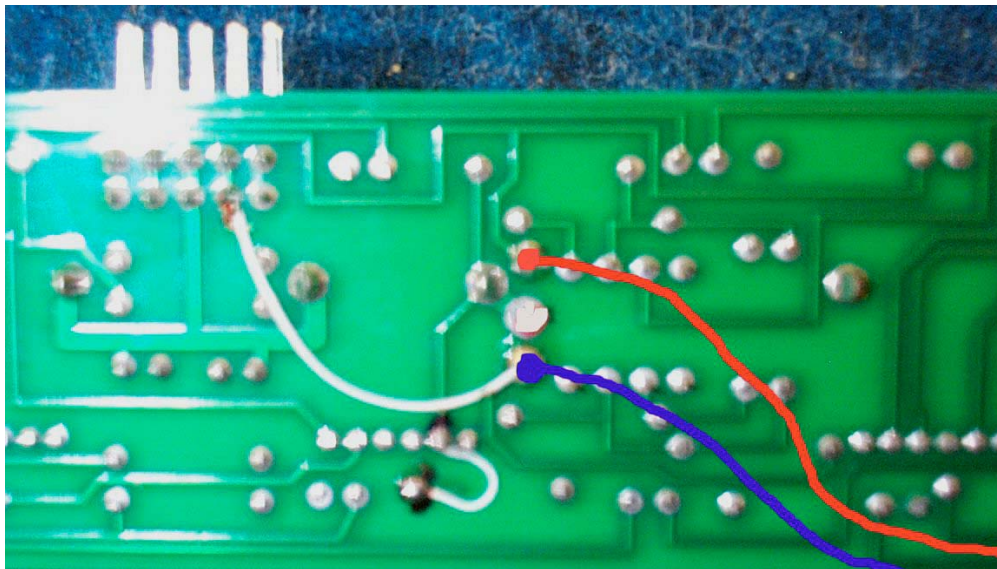

1. Solder the red and blue wires to the location shown on back of the PC board. Note the blue wire already has a jumper to the location on *some* PC boards; be careful to leave it in place.
 2. Solder the black wire to the ground terminal on the "Click" input jack. (See red arrow in top right image).
- **KP-SLA** includes; pre wired connector, 4-40 hardware, two cable ties and instruction sheet.